

This is a guide to show how to insert and how to remove the mulch plug from a Princess lawnmower. The process is also very similar to our other cordless lawnmowers

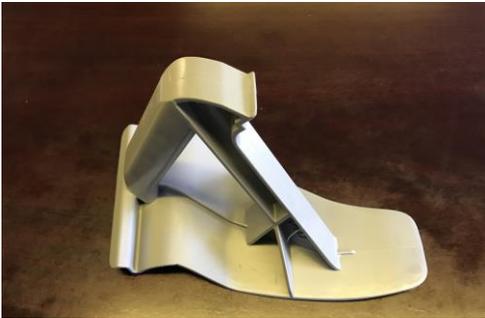


Fig 1



Fig 2



Fig 3



Fig 4

Many of our lawnmowers are now able to “mulch” grass clippings as well as collect or discharge them. This is possible thanks to a “Mulching Plug” which when fitted, blocks the discharge hole in the lawnmower deck. With the Mulching Plug in place, the freshly cut grass is held under the lawnmower deck rather than being collected in the grassbag.

Here it is cut into very small pieces and blown back into the grass to help fertilise your lawn. The Mulching Plug is normally already installed in the lawnmower at the time of purchase. If you find that the grass isn't being collected when using the lawnmower for the first time, or can't find the Mulching Plug, It will usually already be in place.

Fig 1 shows the Mulch Plug and what it should look like from a Princess mower.

To Insert

To insert the Mulch Plug take off the grassbag as shown in Fig 2. Ensure that the grassbag is set aside as you will not need this whilst you are mowing.

Line up the Mulch Plug with the discharge hole as shown in Fig 4 and push the plug forward.



Fig 5



Fig 6



Fig 7



Fig 8

As you reach the final stage in Fig 5 it can be quite stiff to get the Mulch Plug into place.

It is a tight fit to ensure that it does not fall out whilst you are mowing, you need to apply a strong downward force until you feel the plug 'click' into place.

When the plug is correctly in position it should look like Fig 6.

You can then use the mower without the grassbag and it will Mulch the clippings produced.

To Remove

To remove the Mulch Plug, hold the rear handle as shown in Fig 6.

Pull the Plug towards you in an upwards motion, this will require a lot of force until it unclips.

The plug should then be loose enough for you to remove as shown in Fig 7.

Be sure to keep the Mulch Plug in a safe place for future use.